

Application Note

Using a joystick

© 2010 VIVOTEK Inc. All Right Reserved

VIVOTEK may make changes to specifications and product descriptions at any time, without notice.

The following is trademarks of VIVOTEK Inc., and may be used to identify VIVOTEK products only: VIVOTEK.

Other product and company names contained herein may be trademarks of their respective owners.

No part of this publication may be reproduced or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without permission in writing from VIVOTEK Inc.

Revision History

| Version | Issue date | Author | Comment |
|---------|------------|------------|---------------|
| 0.1 | 2010/09/23 | Polly Yang | First draft |
| 1.0 | 2010/09/27 | Polly Yang | First release |
| | | | |

Table of contents

| | |
|--|-----------|
| Introduction | 4 |
| 1. Why use a joystick?..... | 5 |
| 2. Setting up a joystick | 6 |
| 2.1 Connect the joystick to your computer's USB port | 6 |
| 2.2 Enable the joystick | 6 |
| 3. VIVOTEK's HFX 1400 joystick | 10 |
| 3.1 Specifications | 10 |
| 3.2 Buttons..... | 10 |

Introduction

This document describes the setup of a joystick for camera control, using VIVOTEK's HFX 1400 joystick as a specific example where necessary. It is divided into the following three sections:

1. Why use a joystick?
2. Setting up a joystick
3. VIVOTEK's HFX 1400 joystick

VIVOTEK Confidential

1. *Why use a joystick?*

A joystick can be used to control PTZ cameras or speed domes. Simply connect the joystick to the USB port and it is immediately ready for use.

Once properly set up, a joystick can be used to control a camera more intuitively than with a mouse or keyboard. In the second section, joystick settings are described, along with the functions that can be configured.



Figure 1: Joystick (900002500G)

2. Setting up a joystick

2.1 Connect the joystick to your computer's USB port



Figure 2: USB port

2.2 Enable the joystick

There are two ways to use a joystick: through firmware, and through software

(1) Through firmware:

The joystick is ready for use immediately after it is connected to the USB port, but the hotkey buttons will not be functional. On the HFX 1400, to associate the hotkeys with specific actions—such as pan, patrol, and so forth—follow these steps:

- a. On the Home page, right-click in the Live View Window, then select “Joystick Settings” from the pop-up menu.

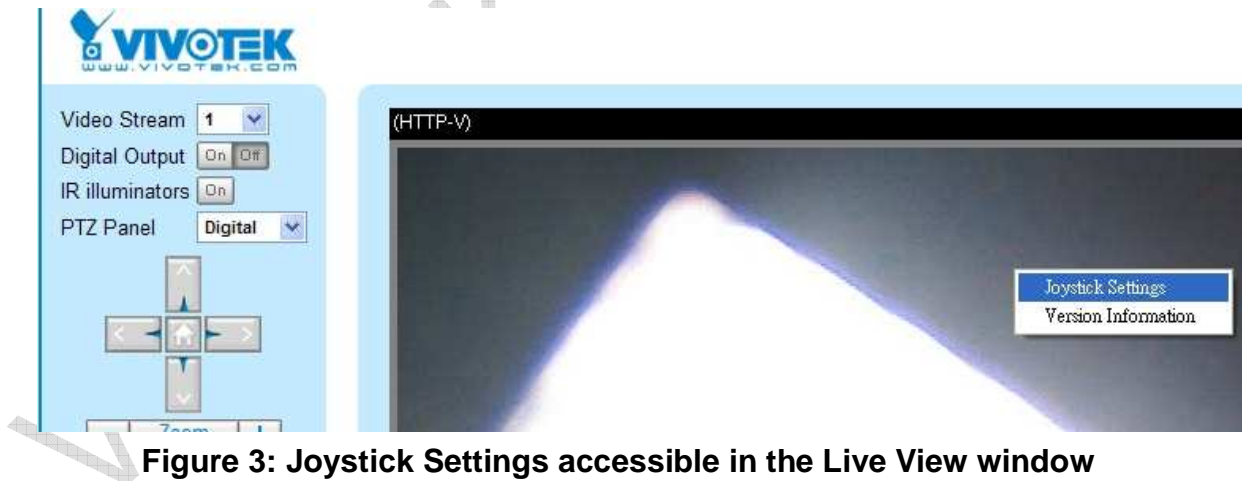


Figure 3: Joystick Settings accessible in the Live View window

- b. In the Joystick Settings window, select the attached joystick from the drop-down menu, and then click Configure Buttons.

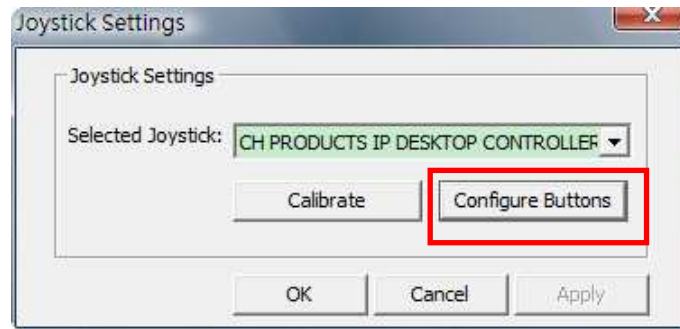


Figure 4: Joystick Settings

- c. In the Buttons configuration window that appears, assign actions to the desired buttons. A list of actions available with the HFX 1400 can be viewed in **Figure 5**.

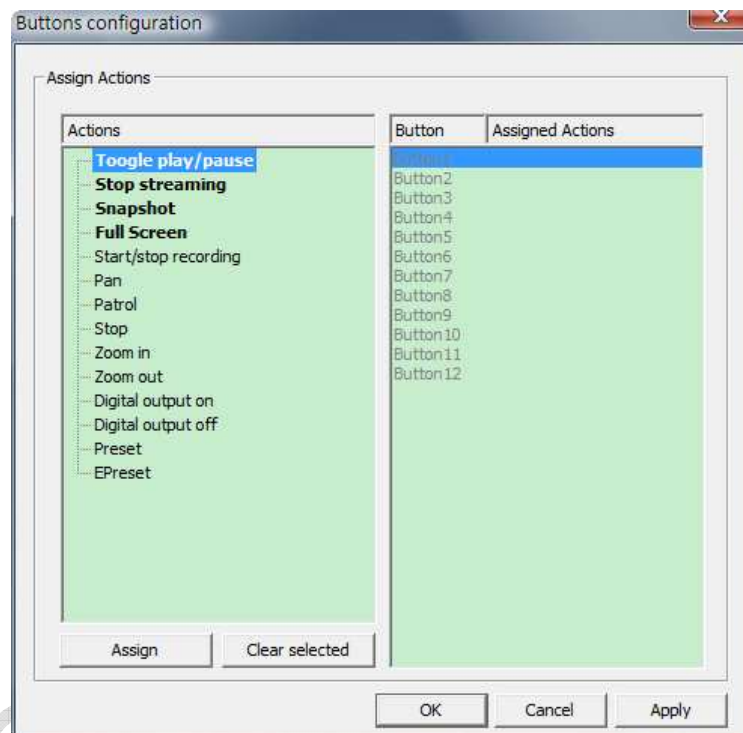


Figure 5: Button configuration window

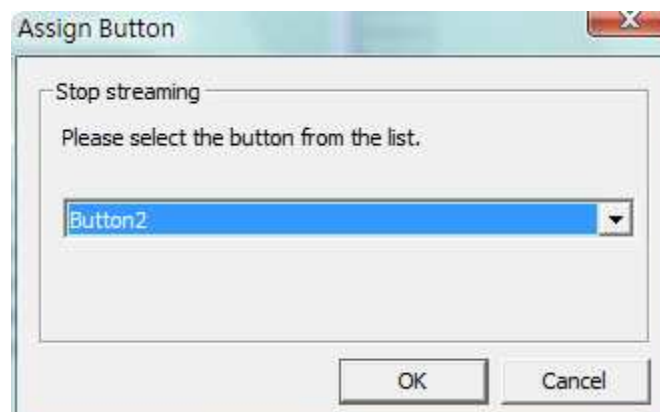


Figure 6: Example showing *Stop streaming* action being assigned to *Button2*

(2) Through software (using the ST7501 as an example):

- a. Select Configuration > Client Settings > Joystick Settings from the menu bar. When the Joystick Settings window appears, the attached joystick should be listed in the drop-down menu.

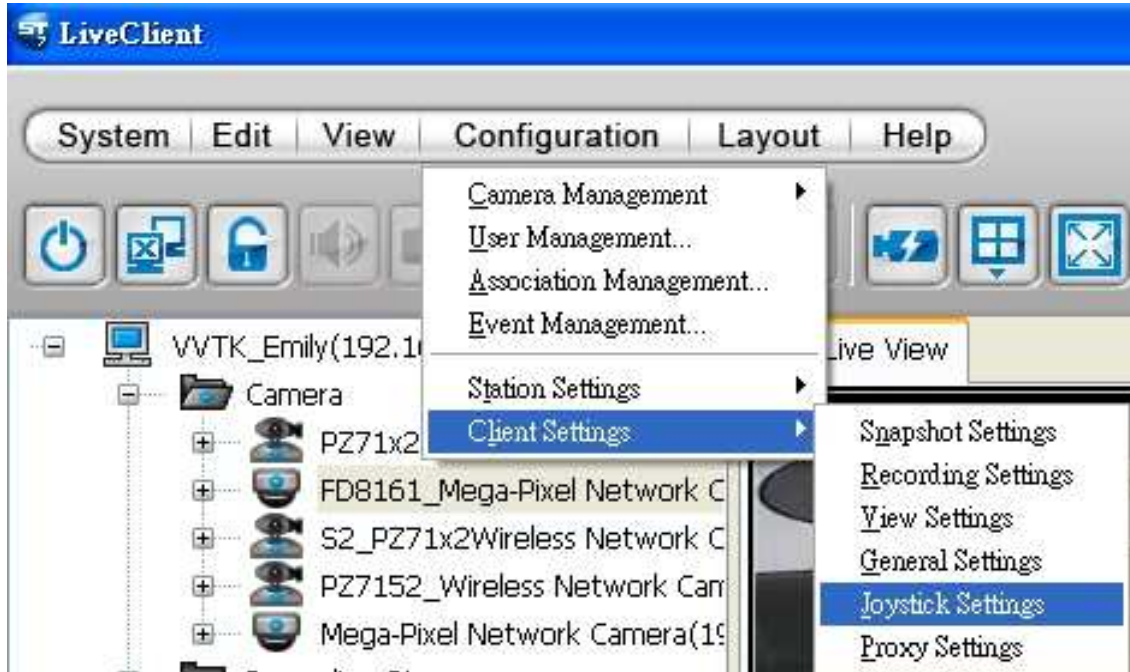


Figure 7: Selecting Joystick Settings

- b. Choose the joystick you wish to configure. Select the Enable Joystick checkbox, and then click Configure Buttons to open the Button Configuration window.

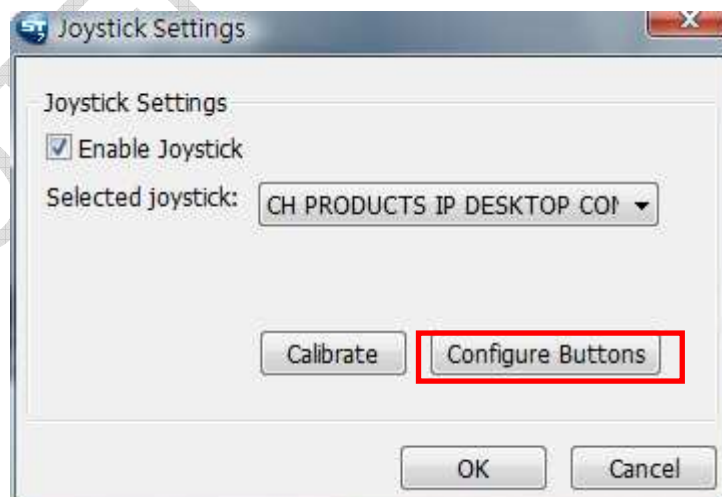


Figure 8: The Joystick Settings window

- c. For the HFX 1400, the actions shown **Figure 9** can be associated with the joystick's twelve buttons.

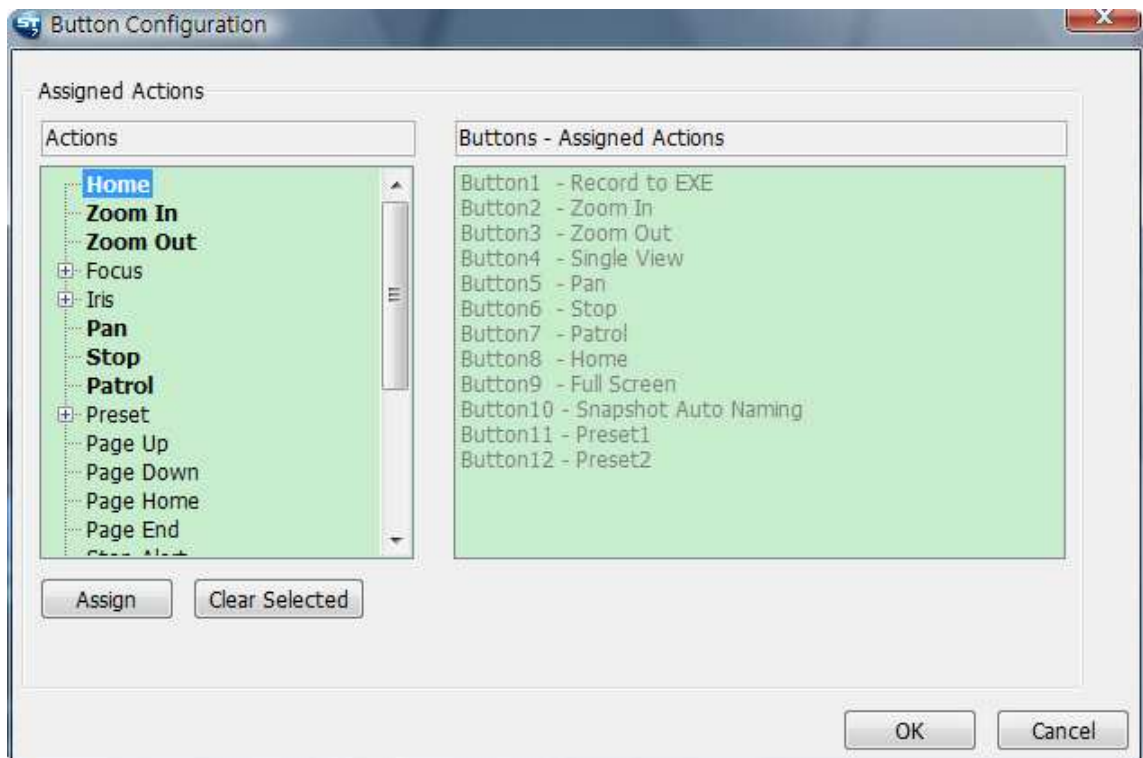


Figure 9: Button Configuration window



Figure 10: Example showing Home being assigned to Button8

Note: The HFX 1400 supports the PZ7111/PZ7121, PZ7112/PZ7122, PZ7131/PZ7132, PZ7151/PZ7152, SD7151, SD7313/SD7323, and SD8111/SD8121, as well as all e-PTZ models. In addition, all future VIVOTEK PTZ and speed domes will support joystick controls. To view a list of supported device, please use the following link:

<http://www.vivotek.com/products/accessories.php?type=joystick>

3. VIVOTEK's HFX 1400 joystick

The HFX 1400 is a USB joystick designed to provide the network video monitoring industry with responsive and accurate pan/tilt/zoom camera positioning controls.

3.1 Specifications

- (1) Package dimensions (L x W x H): 300 x 300 x 350 mm
- (2) Package weight: 797 g
- (3) Joystick: Three-axis, USB interface
- (4) Joystick travel: 36° (18° from center)
- (5) Buttons: 12, all programmable
- (6) Housing: High-impact glass-filled nylon
- (7) Application: VIVOTEK Plug-in, ST7501, VAST and NR7401
- (8) Weight: 441 g
- (9) Supply voltage (USB bus): 5 V DC ($\pm 0.5V$)
- (10) Supply current (USB bus): 32mA
- (11) Operating temperature: -25 to 70°C
- (12) Certification: CE FCC RoHS
- (13) External dimensions (L x W x H): 169 x 156 x 126 mm

3.2 Buttons



Figure 11: Location of buttons